

STORE WEIGHT Add fish to scale using hook, the weight of the fish will show under **CURRENT WEIGHT/LOCK/LIGHT**. Press **CURRENT WEIGHT/LOCK/LIGHT** to lock in the weight. Use **BIN SELECTION** ◀ ▶ to select desired bin. Press **ACTIVE BIN WEIGHT** to store weight into selected bin.

DELETE WEIGHT Select **ACTIVE BIN** to delete. While holding the **DELETE** button down, press the **ACTIVE BIN WEIGHT**. The bin's weight will flash, press **DELETE** again to confirm deletion.

TARE WEIGHT Hang container that fish will be weighed in on hook. Press **TARE**, the **CURRENT WEIGHT BIN** will flash and will set to zero. Press **TARE** to reset scale to zero.

CHANGING LBS TO KG Press the **ON** button to turn on scale, while the numbers are flashing press the **ON** button again to select **LBS** or **KG**. Once selected, wait for numbers to flash. Now the scale is ready to use.

Requires 2 AAA batteries
(batteries not included).

