



### Features

- A 3 Weight Display Options**  
Choose lb./oz., decimal lbs. or kg.
- B 8 Storage Bins**  
Store up to 8 individual fish weights.
- C Total Catch Weight** Continuously displays total weight stored in bins.
- D Back Light** Illuminates screen for low light and evening conditions.
- E Ambient Temp**  
Displays current air temperature.
- F Sound**  
Turn acknowledgment tone on or off.

### TURN ON AND CHOOSE PREFERRED MEASURING UNITS (A) (00 Lb. 00oz °F / 00.00 Lbs. °F / 00.00 Lbs. °C / 00.00 Kg °F / 00.00 Kg °C)

- 1) Press **POWER** button for 3 seconds (until screen flashes)
- 2) While screen is flashing press the **POWER** button to cycle through the units.
- 3) When desired units are shown on the display wait until flashing stops. Next time you turn on your scale the chosen unit will be set as default.

### ADJUST SCALE TO ZERO

Press the **CLEAR SCALE** button on touch screen.

### TURN ON OR OFF BACK LIGHT (D)

Press **LOCK/LIGHT** button until back light turns on or off.

### TURN ON OR OFF BEEP SOUND (F)

Press **SOUND** icon button until you hear a beep sound.

### MEASURE THE WEIGHT OF A FISH

- 1) Add fish to the scale using the clip or hook.
- 2) The weight of the fish will show on the display.

### STORE A WEIGHT INTO STORAGE BIN (B)

After fish is on the scale and the weight of the fish is showing on the display:

- 1) Press **LOCK/LIGHT** button once. You will see the  flashing.
- 2) Press the desired storage bin (1-8) to save the weight.
- 3) Weight will be shown in selected bin.

### DELETE WEIGHT STORED IN BIN (B)

- 1) Press the **UNDO** button and the desired bin at the same time.
- 2) The **CLEAR SCALE** button will be flashing.
- 3) Press the **CLEAR SCALE** button to delete the bin.

### DELETE ALL BINS (B)

- 1) Press the **POWER** button and the **CLEAR SCALE** button at the same time
- 2) All the storage bins will flash
- 3) Press the **CLEAR SCALE** button to delete all bins.

### TURN OFF

Press **POWER** button for 3 seconds (until screen goes blank)

Requires 2 AA batteries  
(batteries not included).

